



Reference temperature:

Curve A: winding temperature = ambient temperature

Curve B: winding temperature = operating temperature

Overload capability (guide values)