



Reference temperature:

Curve A: Winding temperature = ambient temperature

Curve B: Winding temperature = operating temperature

Overload capability (guide values)